

DOZUKI

Installing Steering Wheel Quick Release

Written By: Brian Sallee



TOOLS:

- [Phillips Screwdriver \(1\)](#)
- [conductivity tester \(1\)](#)




PARTS:

- [NRG Innovations Quick Release \(1\)](#)

SUMMARY


Follow our easy step-by-step instructions to install your NRG Innovations Steering Wheel Quick Release

Step 1 — Steering Wheel Removal



- Make Sure the steering wheel is straight, and remove the factory steering wheel and airbag
- Warning: Use caution when removing steering wheels equipped with airbags 
- Refer to vehicle's service manual for instructions on removing the factory wheel 
- Remove the airbag SRS reel, take apart the dash/column panels and disconnect the reel from all wiring harnesses

Step 2

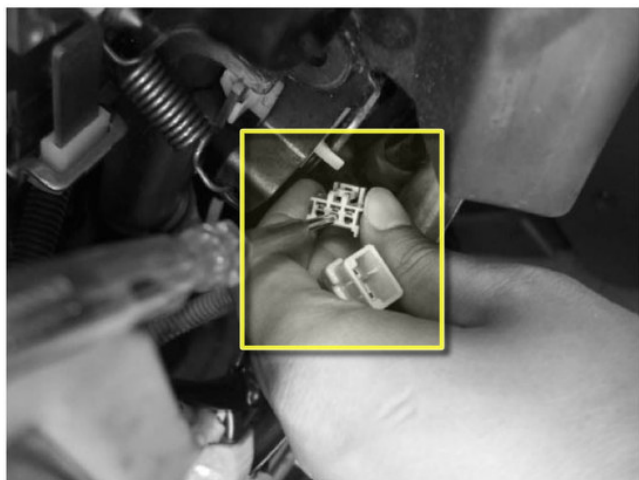

- Using a conductivity tester, locate the horn wire on the harness.
- Clamp a pin connector to a wire and plug it into the horn wire harness. Run the wire up the steering column.


Step 3



- Find something that will conduct electricity that is thin and has good flexibility.
- We had an old hair clip lying around, and that will serve as our horn contact. (We've also found that other installers have used a variety of things from OEM Shoehorns to cotter pins and conductors.)
- We modified the hair clip like so.




Step 4

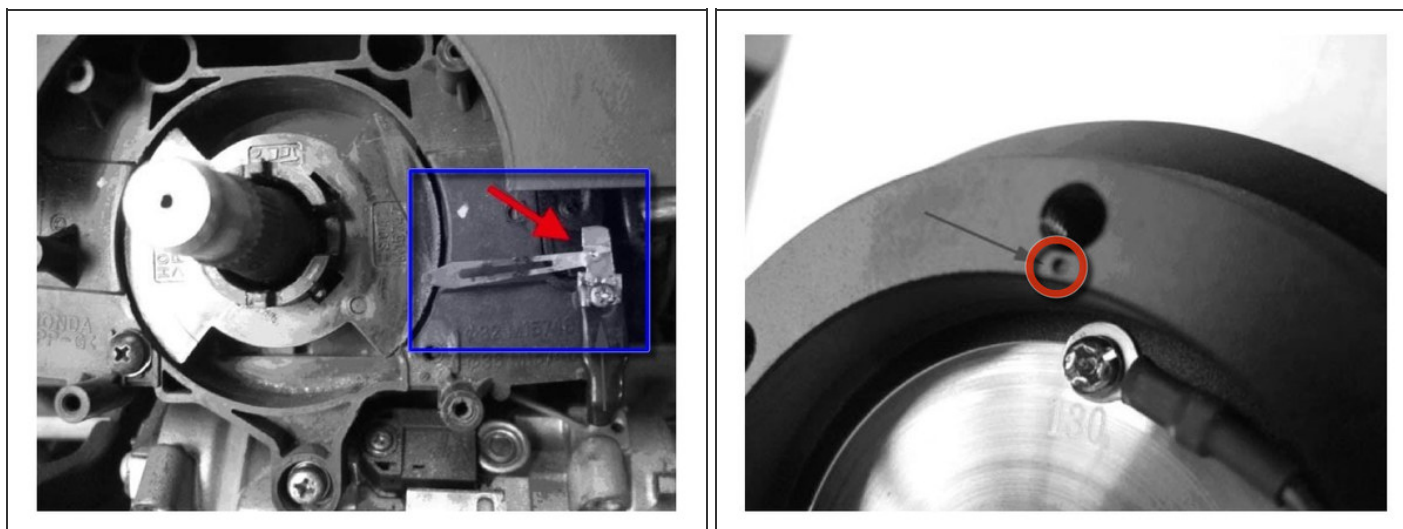

- Bolt this wire up to the turn signal/wire switch base.
- You will need to figure out how to bolt or screw the turn signal wire to the base.
- Make sure that the horn contact that was just created contacts the rear of the short hub. The horn connector may need to be bent to accommodate the short hub
- Notice the little dot on the short hub. The dot signifies that the hub is in the up position. Bolt the hub in upward position




Step 5



- Connect the wires from the base of the quick release to the wires coming from the short hub.
- Caution: The yellow wire will be the hot wire, so connect accordingly.
- Bolt down the quick release base to the short hub with the supplied screws.
- Do not forget about the dot signifying the up position. The dot also appears on the base of the quick release.



Step 6

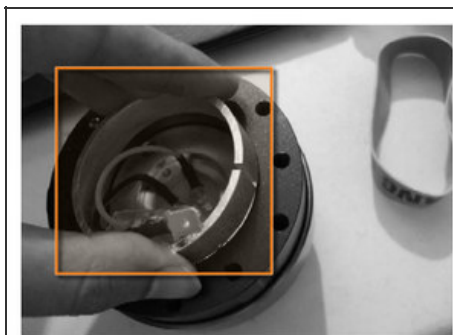

- Insert the horn button retainer ring into the top of the quick release body
- When installing the steering wheel, the components go in this order: **Ring garnish** (if applicable), **Horn button, Steering Wheel, Quick release base**
- Remember to align the top dots and of course connect the horn wires accordingly.
- Remember to align the top dots and connect the horn wires accordingly.



Congratulations! You have completed the installation of your NRG Steering Wheel Quick Release.

This document was last generated on 2012-11-17 04:27:56 PM.